



INSTALLATION DATA SHEET

BATTERY REPLACEMENT


1. Turn off electrical power.
2. Remove the end caps located on each side of the fixture.

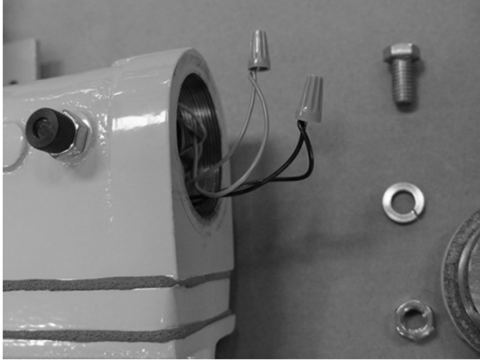


3. Pull the wires out on the side of the housing.
4. Remove the two wire nuts connecting the LED.
5. Remove the two nuts, bolts and washers located on top of either end of the housing.

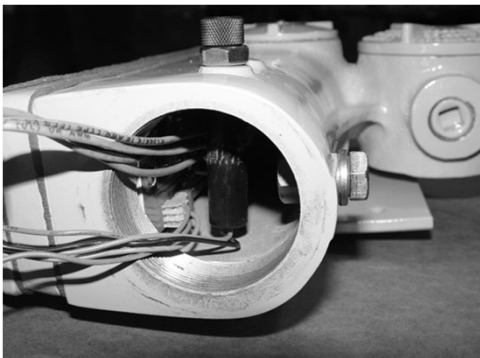


6. Remove the red LED indicator assembly from the housing.

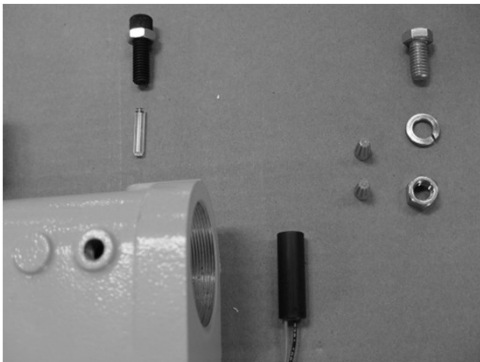


7. Protect the glass rod from damage.
8. Remove the screws holding the LED circuit board to the housing by inserting a screwdriver through the bolt holes.
9. Partially slide out the circuit boards from the right side of the ballast housing.

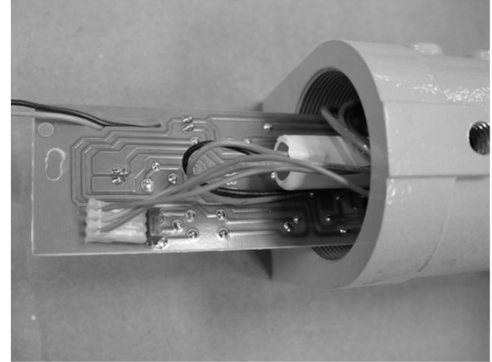

10. Remove the wire connector by sliding the connector out of the circuit board.

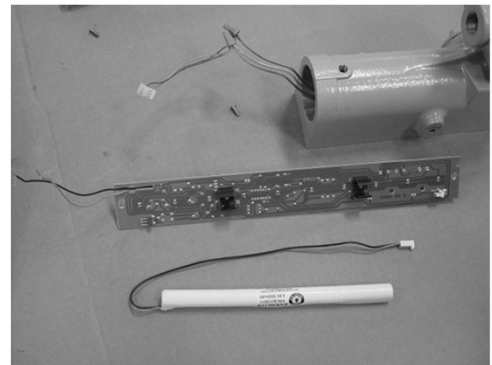

11. Remove the circuit board from the housing.
12. Remove the battery unit's wire connector from the circuit board.

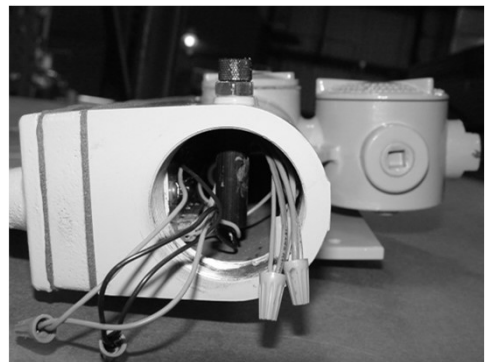

13. Replace the battery and reverse the order to install.

RIG-A-LITE™

8500 Hansen Rd.
Houston, TX 77075 USA
HLEXIDS

Tel: 713-943-0340

Oct 2022

availinfra.com/rig-a-lite/

Rev. 2